BODY LOC

COLLISION REPAIR EQUIPMENT

POST SET UP

1. ADJUST COLLAR TO DESIRED HEIGHT
   A. PUT LEFT HAND UNDER BACK OF COLLAR (PIC #1)
   B. UNLOCK CAM HANDLE (DO NOT TWIST) (PIC #2)
   C. LIFT OR LOWER COLLAR (PIC #3)
   D. LOCK CAM HANDLE (PIC #4)
2. ANCHOR COLLAR
   A. CHAIN CAN BE ANCHORED TO TYDOWN (PIC #5)
   B. OR TO A CHAIN SPANNING BETWEEN 2 TYDOWNS THAT FORM A V (PIC #6)

(CHAIN MUST BE ANCHORED AT APPROXIMATELY 45 DEGREE ANGLE)

3. ATTACH PULL CHAIN TO CLAMP (PIC #7)
4. PULL OUT SLACK (PIC #8)
5. STAND TO THE SIDE & PRESS ON THE PEDAL OF PUMP (PIC #9)
6. IF YOU RUN OUT OF RAM TRAVEL INSERT CHAIN FORK & RELEASE PRESSURE (PIC #10) - REPEAT STEPS 4 & 5

(KEEP HANDS AWAY FROM CHAIN FORK WHEN RELEASING PRESSURE)

7. USE SAFETY CHAIN ON HEAVY PULLS

PIC #1

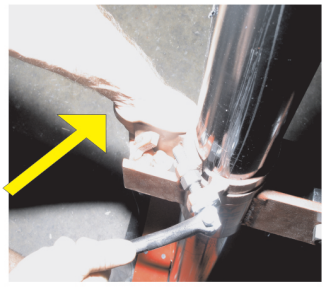

PIC #2

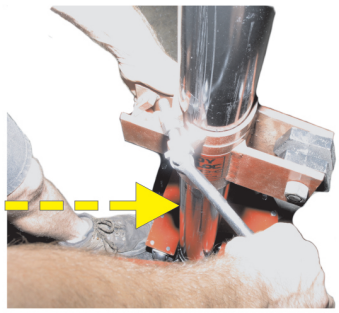

PIC #3

PIC #4

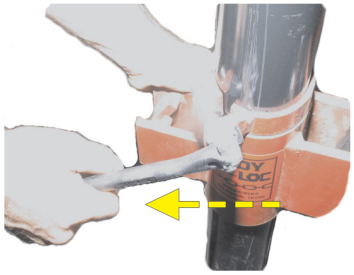

PIC #5

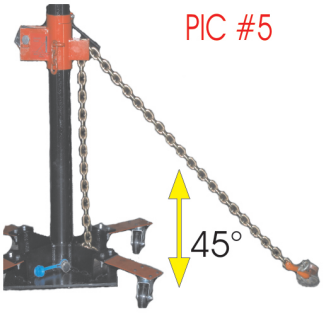

PIC #6

PIC #7

PIC #8

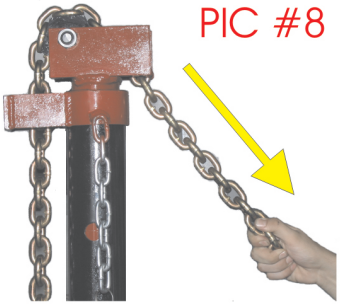

PIC #9

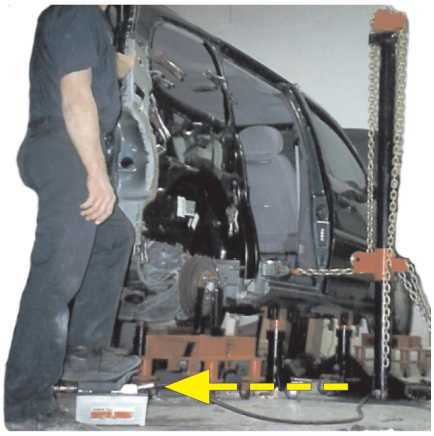

PIC #10

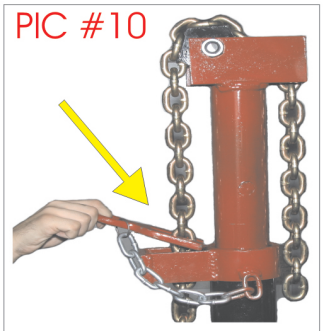

Body Loc, Inc. 5738 Newt Patterson Road, Mansfield, TX 76063
800-510-8564 • 817-478-9570 •817-478-8360 fax • www.bodyloc.com•info@bodyloc.com